



the engine. Take the plug and igniter out of the engine. If the igniter has burned, it worked but did not ignite the engine because it was not touching the propellant inside the engine. Put a new igniter all the way inside the engine without bending it. Push the plug in place. Repeat the steps under Countdown and Launch.

www.estesrockets.com


Estes Industries 1295 H Street Penrose, CO 81240 Printed In China

FIRESTREAK SST" **MODEL ROCKET** #0806

FLYING MODEL ROCKET KIT **INSTRUCTIONS** 


KEEP FOR FUTURE REFERENCE



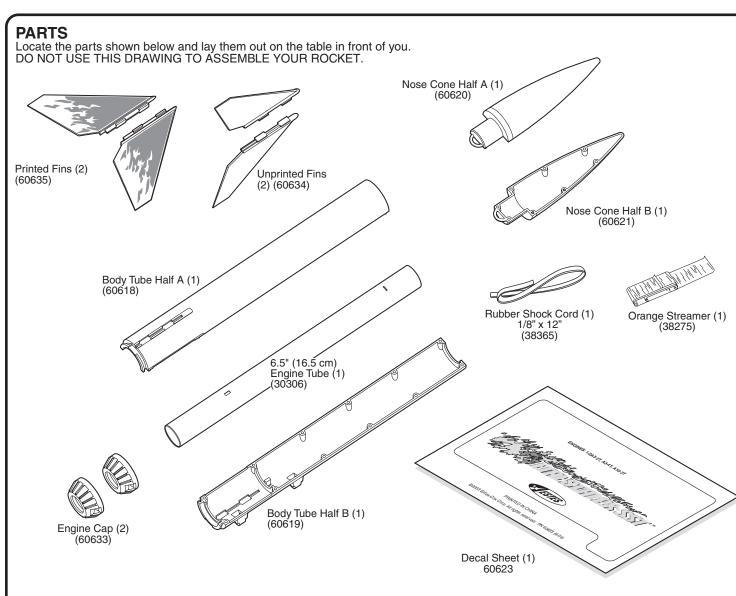


## 1. ASSEMBLE NOSE CONE

A. Match the Nose Cone Half A with Nose Cone Half B and snap together.

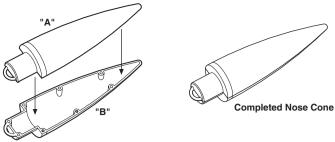

#### 2. INSTALL SHOCK CORD

 



B. Pass the other end of the Shock Cord through the slit at the top of the Engine


until the double knot stops at the slit.

Tube. Pull the Shock Cord through the tube


A. Tie a double knot at one end of the Shock Cord.


# 3. INSTALL ENGINE TUBE

A. Align the hole on the Engine Tube with the pin on Body Tube Half B (the one with launch lugs). Insert the Engine Tube.

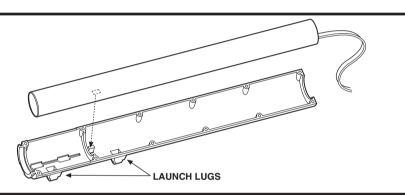


# 4. ATTACH FINS

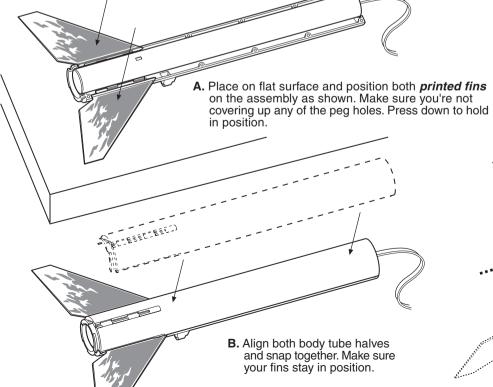

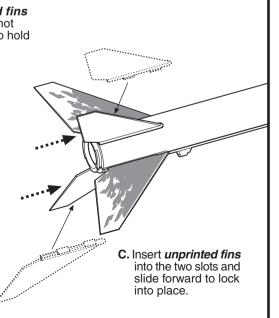

## **5. ATTACH ENGINE CAP**

A. Attach Engine Cap and turn clockwise to lock into place.

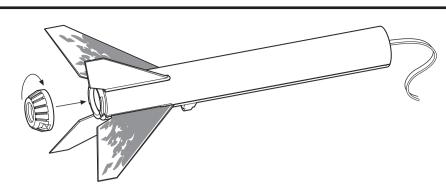

## 6. ATTACH SHOCK CORD **AND STREAMER**

A. Tie the Shock Cord to the Nose Cone using a double knot. B. Tie the Streamer to the Shock Cord using a double knot.

## **DECAL PLACEMENT**

 
A. Peel decal from backing sheet and apply as shown. Rub down to remove

NOTE: The decal must be applied as it reinforces the body tube seams.




NOZZLE

## PREPARE FOR FLIGHT




A. Insert two squares of loosely crumpled recovery wadding into Body Tube.

 NOTE: Only Estes Wadding (302274) recommended.



 C. Roll Streamer.



## PREPARE ENGINE


#### ▲ WARNING: FLAMMABLE

To avoid serious injury, read instructions & NAR Safety Code included with engines.

PREPARE YOUR ENGINE ONLY WHEN YOU ARE **OUTSIDE AT THE LAUNCH SITE PREPARING TO LAUNCH!** If you do not use your prepared engine, remove the igniter before storing your engine.



C. Separate Igniter & Plug.

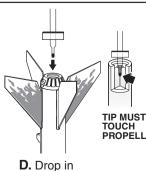


Igniter.


PROPELLANT

E. Insert **I**aniter Ρ̃lug.

A. Remove

Engine Cap.

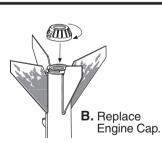

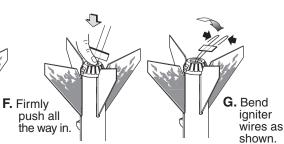

Page 2